




Installation of the adaptation kit front shock absorbers

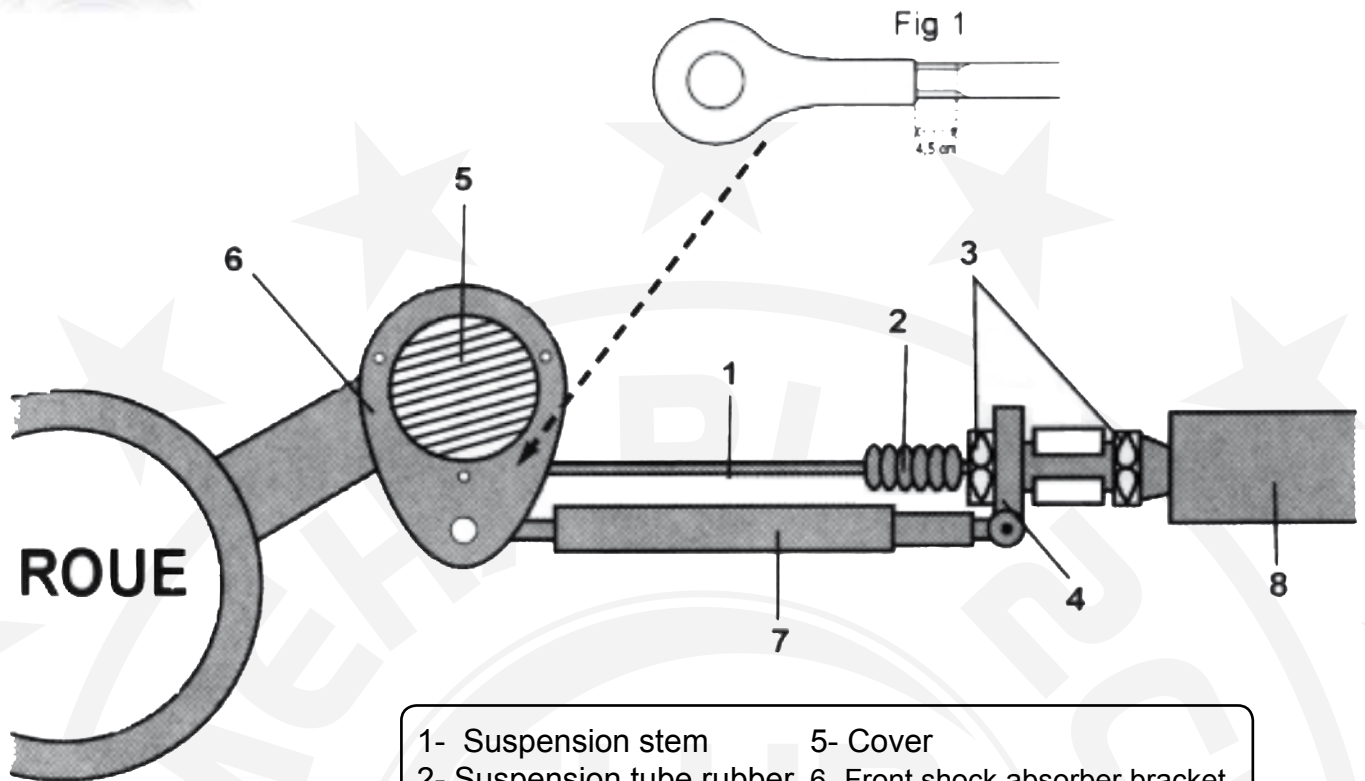

- | | |
|---------------------------|---------------------------------|
| 1- Suspension stem | 5- Cover |
| 2- Suspension tube rubber | 6- Front shock absorber bracket |
| 3- Nut | 7- Shock absorber |
| 4- Fixation plate | 8- Suspension |

- 1/ Raise the car until the wheels are free (position jack + wedge under the car)
- 2/ Unscrew the stem from the steering arm (using a n°9 spanner)
- 3/ Detached the tube rubber (2) and unscrew the nut (3) then remove them by slipping along the suspension stem
- 4/ Pass the small fixation plate (4) towards the stem and the threaded part. Install correctly (stem towards the lower part and outside the car). Remounting the nut (3) and the tube rubber (2)
- 5/ Remounting the stem while leaving 4,5 cm of apparent threading (see picture 1)
- 6/ Remove the cover of the steering arm (5) by unscrewing the 3 bolts using a n°11 spanner. Remove the friction unit with a screw driver. Keep the cover.
- 7/ Install the shock absorber on the fixation plate n°6, nuts + disc without tightening.
- 8/ Install the shock absorbers on the fixation plate n°4, nuts + disc without tightening.
- 9/ Fix the plate n°6 above the friction unit cover recover during the 6 th step with the 3 screws 11.
- 10/ Lower to the ground the vehicle. Tighten the 2 shock absorbers nuts.